ROCKWELL®

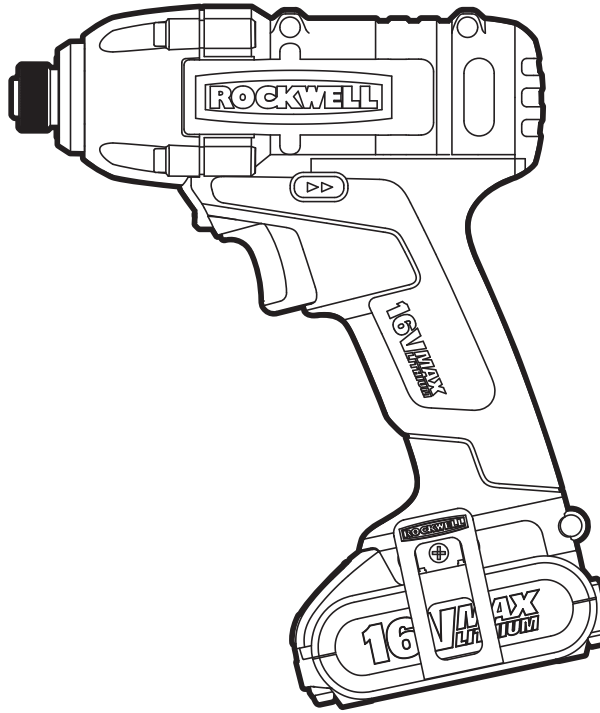

italian design

ErgoSum™
design technology

16V MAX* LITHIUM

16V CORDLESS IMPACT DRIVER	PAGE 6 ENG
16V OLTIOS TALADRO PERCUTOR DE IMPACTO SIN CABLES	PAGE 10 ESP
LECTEUR D'IMPACT SANS FIL À 16V	PAGE 15 FRE

RK2611K2

Thank you for purchasing a ROCKWELL® power tool. We are confident that you will appreciate the quality of the product and you will be entirely satisfied with your purchase. Please read carefully the user safety and operating instructions on how to operate this product correctly within safety norms and regulations.

Gracias por su compra de un producto ROCKWELL®. Estamos seguros de que apreciará la calidad del producto y de que estará completamente satisfecho con su compra. Lea cuidadosamente las instrucciones de seguridad y de operación para obtener mayor información acerca de cómo utilizar éste producto correctamente dentro de las normas y reglas de seguridad.

Merci d'avoir choisi un produit de marque ROCKWELL®. Nous sommes certains que ous apprécierez la qualité de ce produit et qu'il saura vous satisfaire. Pour être renseigné sur toutes les méthodes de travail correctes et sécuritaires répondant aux normes et règlements de sécurité, veuillez lire attentivement la notice de sécurité et de fonctionnement présentée.

Visit us on the web at www.rockwelltools.com

ROCKWELL®

RK2611K2

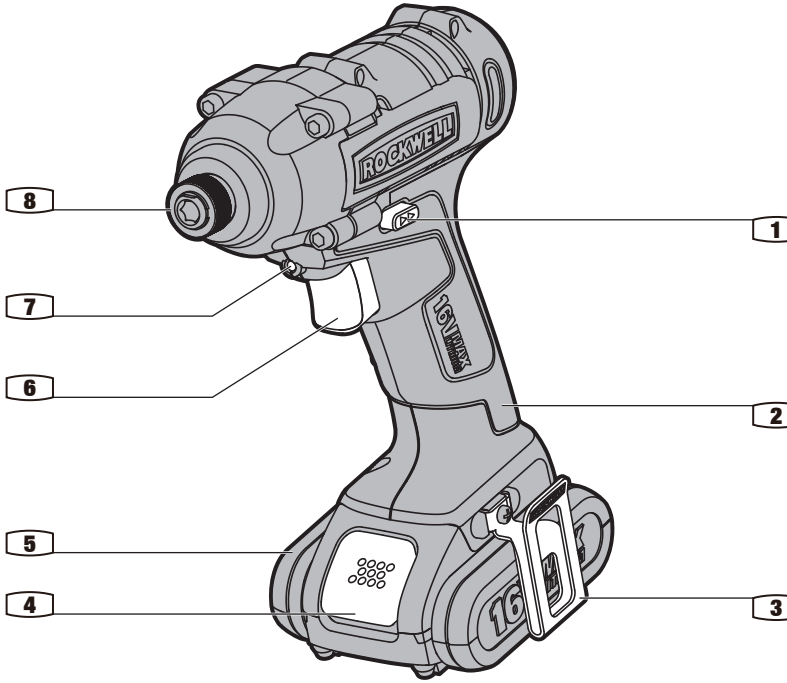

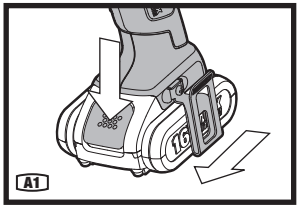

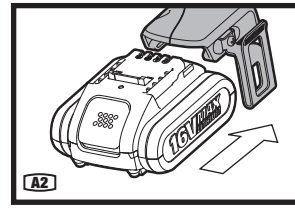

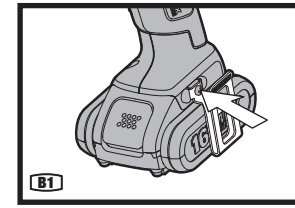

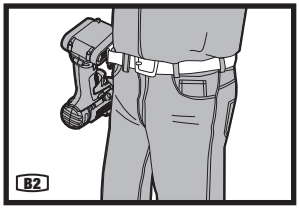

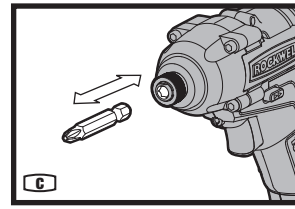

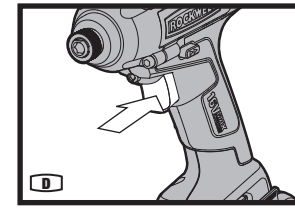

RK2611K2

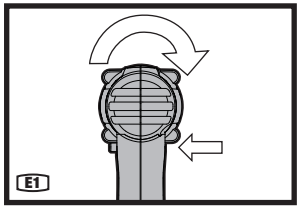

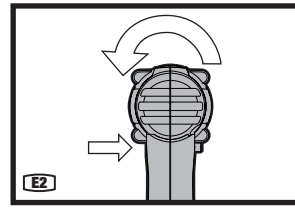

COMPONENT LIST

1. FORWARD/ REVERSE ROTATION CONTROL
2. SOFT GRIP HANDLE
3. BELT CLIP
4. BATTERY PACK RELEASE BUTTON
5. BATTERY PACK
6. ON/OFF SWITCH WITH VARIABLE SPEED CONTROL
7. LED LIGHT
8. COLLECT LOCKING SLEEVE

ACCESSORIES

1.3Ah Battery pack (RW9316)	2
30min Charger (RW9416)	1
Screwdriver bit (2˝ PH2)	1
Belt clip	1

We recommend that you purchase your accessories from the same store that sold you the tool. Use good quality accessories marked with a well-known brand name. Choose the type according to the work you intend to undertake. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

GENERAL POWER TOOL SAFETY WARNINGS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.
The term power tool in the warnings refers to your electric (corded) power tool or battery-operated (cordless) power tool.

1) WORK AREA SAFETY

a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.

b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2) ELECTRICAL SAFETY

a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

b) Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.

c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp

edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use marked "W-A" or "W".** Use of a cord suitable for outdoor use reduces the risk of electric shock.

f) **If operating a power tool in a damp location is unavoidable, use a Ground Fault Circuit Interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.

3) PERSONAL SAFETY

a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.

d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.

g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

4) POWER TOOL USE AND CARE

a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.

b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.

f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) **Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

h) **Use clamps or another practical way to secure and support the workpiece to a stable platform.**

i) **Holding the work by hand or against your body leaves it unstable and may lead to loss of control.**

5) BATTERY TOOL USE AND CARE

a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) **Use power tools only with specifically**

designated battery packs. Use of any other battery packs may create a risk of injury and fire.

c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

6) SERVICE

a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

WARNING: Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints;
- Crystalline silica from bricks and cement and other masonry products and
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

ADDITIONAL SAFETY RULES FOR YOUR CORDLESS IMPACT DRIVER

1) **Hold power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring.** Fasteners contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.

TECHNICAL DATA

Charger voltage	120 V~60 Hz
Rated voltage	16 V Max* ⎓
Nominal voltage	14.4 V ⎓
No-load speed	0-2600/min
Impact rate	0-3000 bmp
Max torque	950 in-lbs
Chuck size	1/4˝
Charging time	30 min
Machine weight	2.5 lbs

* Voltage measured without workload. Initial battery voltage reaches maximum of 16 volts. Nominal voltage is 14.4 volts.

OPERATING INSTRUCTIONS

NOTE: Before using the tool, read the instruction book carefully.

BEFORE PUTTING INTO OPERATION

A) BATTERY CHARGING

The battery charger supplied is matched to the Li-Ion battery installed in the machine. Do not use another battery charger.

The Li-Ion battery is protected against deep discharging. When the battery is empty, the machine is switched off by means of a protective circuit: The chuck no longer rotates.

In a warm environment or after heavy use, the Battery Pack (5) may become too hot to permit charging. Allow time for the battery to cool down before recharging.

When the battery is charged for the first time and after prolonged storage, the battery will only accept approximately 60% charge. However, after several charge and discharge cycles the battery will accept a 100% charge.

B) TO REMOVE OR INSTALL BATTERY PACK (See Fig. A1, A2)

Depress the Battery Pack Release Button (4) to release and slide the Battery Pack (5) out from your tool. After recharge, slide it back into your tool. A simple push and slight pressure will be sufficient.

OPERATION

1. HOW TO USE THE BELT CLIP (See Fig. B1, B2)
Screw the Belt Clip on the tool with the screw provided in the plastic bag. The Belt Clip (3) can be hooked on your belt or pocket, etc.

2. INSTALLING OR REMOVING A BIT HOLDER, SOCKET OR SCREWDRIVER BIT (See Fig. C)
To install the desired bit, pull the Collet Locking Sleeve (8) forward and insert the desired bit into the sleeve as far as it will go. Then release the collet locking sleeve to secure the bit.
To remove the bit, pull the Collet Locking Sleeve (8) forward and take the bit out firmly.

3. ON / OFF SWITCH (See Fig. D)
Depress the On/Off switch (5) to start and release it to stop your tool. The On/Off Switch is fitted with a brake function which stops your chuck immediately when you quickly release the switch.
It is also a variable speed switch that delivers higher speed and torque with increased trigger pressure. Speed is controlled by the amount of switch trigger depression.

⚠ WARNING: Do not operate for long periods at low speed because excess heat will be produced internally.

4. SWITCH LOCK
The On/Off Switch (6) can be locked in the OFF position. This helps to reduce the possibility of accidental starting when not in use. To lock the Switch, place the Forward/ Reverse Rotation Control in the center position.

5. REVERSIBLE (See Fig. E1, E2)
For drilling and screw driving use forward rotation marked " ◀◀ " (Rotation Control lever is moved to the left). Only use reverse rotation marked " ▶▶ " (lever is moved to the right) to remove screws or release a jammed drill bit.

⚠ WARNING: Never change the direction of rotation when the chuck is rotating, wait until it has stopped!

6. USING THE LED LIGHT
The LED light allows you to keep a clear view under less illuminated circumstances. To turn on the Light simply press the On/Off Switch (6). When you release the on/off switch, the Light will go off.
The LED Light is also a battery capacity indicator. It will flash when power gets low.

7. DISPOSAL OF AN EXHAUSTED BATTERY PACK

To preserve natural resources, please recycle or dispose of the Battery Pack (5) properly. This Battery Pack contains Lithium batteries. Consult your local waste authority for information regarding available recycling and/or disposal options. Discharge your Battery Pack by operating your tool, then remove the battery pack from the tool housing and cover the battery pack connections with heavy-duty adhesive tape to prevent short circuit and energy discharge. Do not attempt to open or remove any of the components.

MAINTENANCE

Your power tool requires no additional lubrication or maintenance.
There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.